

HS Automatic ApS
Bjerringbrovej 70
DK-2610 Roedovre
Denmark

Tel. +45 44 94 02 22
Fax. +45 44 94 03 33
email: hsa@hsautomatic.com
<http://www.hsautomatic.com>

VAT no. 17 27 59 92
CVR. no 17 27 59 92
GIRO-no. 801-1710
Lokalbanken 6301 152616-2

TO: HSA Dealers

Date: Fejl! Ukendt argument for parameter.

Att: Service department

From: Thomas Kristiansen

BIOS/CMOS settings for TIPC

ENDAT3205M MAINBOARD GUIDE FOR SETTING BIOS

Before you begin you have to connect a PS/2 keyboard and a VGA monitor, you cannot perform this operation without!

1. Enter the BIOS editor: Turn on your IPC by pressing the red button on the front. Immediately press the delete key on your keyboard. Wait until the BIOS editor is loaded.
2. Resetting the BIOS: Select the option: **LOAD OPTIMIZED DEFAULTS**
And press Y and enter to approve.
3. Choosing the correct settings:

In **STANDARD CMOS FEATURES** set the following:
HALT ON = NO ERRORS
DRIVE A = NONE
Press ESC to exit menu

In **ADVANCED BIOS FEATURES** set the following:
FIRST BOOT DEVICE = USB-CDROM
SECOND BOOT DEVICE = HARD DISK
Press ESC to exit menu

In **ADVANCED CHIPSET FEATURES** set the following:
SELECT DISPLAY DEVICE = CRT+LCD
PANEL TYPE = 0A
Press ESC to exit menu

In **POWER MANAGEMENT SETUP** set the following:
SOFT-OFF BY PWRBTN = DELAY 4 SEC.
Press ESC to exit menu

In **PnP/PCI CONFIGURATIONS** set the following:
PNP OS INSTALLED=YES
RESET CONFIGURATION DATA=ENABLED
Press ESC to exit menu
4. Closing the editor: Move the cursor to: **SAVE AND EXIT SETUP** and press enter
Press Y and enter to save the new settings.

To enter a menu press ENTER – To exit a menu press ESC – To select an item press ENTER – To move between options/menus use the arrow keys