

Setup Touch IPC for first use

When you receive your Touch IPC, you need to make some initial steps to set it up. This step-by-step guide will tell you what to do.

If you receive a machine without Windows® installed

As it is optional to have Windows® installed, your machine may be delivered without any operative system (a blank hard drive). You need to install Windows® and OBJ manually. Please follow these steps:

- Connect an external CD-ROM drive (f.ex USB-based) to the computer. You can not open the machine to connect an internal CD-ROM drive, as this will void the warranty and possibly destroy cables inside.
- Connect a keyboard and mouse to the computer
- Enter the BIOS on startup. Set the computer to boot from USB.
- Now install Windows as you would normally do.
- After Windows® has installed, you must install drivers for the motherboard / graphics / touch panel. These drivers are supplied on CDs with the machine.
- Finally, disconnect the external CD-ROM drive.
- You are now ready to finish the installation of Windows, as follows. Notice that your procedure may vary if you have installed Windows XP®

If windows® is pre-installed in your machine

It is possible that you have ordered your machine with Windows® 2000 pre-installed. First time you turn on the machine, you will need to finish the installation of Windows. This mostly involves personalization, and can not be done by HS Automatic.

Follow these steps to complete installation:

- Connect a keyboard and mouse to the computer
- Accept the Windows 2000 licence and click Next
- Choose desired language and keyboard layout and click Next
- Enter your name and organization
- Enter the CD-Key. This is a 5 x 5 character code that is written on the label attached to the machine. It looks similar to this: XJ8H8-DHG82-SHS2K-SHA83-CN19M
- Enter the computer name
- Enter the administrator password, if needed. Notice: if you enter a password here, do not forget it
- Set the date and time, plus the timezone
- Adjust the network settings
- Finally, press "Finish". Your machine will restart at this point

Calibrating the touch screen

To get the best performance from your touch screen, it must be calibrated. Follow these steps to do this:

- Open "TouchWare" (link from ikon on Desktop)
- Click "Calibrate", large button in the middle of the screen
- Calibration targets appear on the screen.



A hand guides you through the calibration process pointing, in turn, to the appropriate target. Your finger should completely cover the yellow target, and you should hold the finger pressed as long as the text "Hold" appears.

- When you have pressed both targets, the calibration settings are saved. **Do not touch the screen during this time.**

Rotating the touch screen 180°

If you would like to rotate the screen (typically to mount the unit with the connections downwards), you can do this through software. Follow these procedures:

- Click the "S3" icon in the task panel (next to the clock)
- Options will appear for rotation. Select 180° or 0° as needed. The screen will be rotated
- Notice that your touch display will **not be rotated at this point**. You need to re-calibrate the touch screen as described above

Setup OBJ INKdraw to start automatically

To make the controller software OBJ INKdraw start automatically, you need to set this in the preferences. Follow these steps:

- Start OBJ INKdraw from the icon on the desktop
- Enter preferences (File->Preferences)
- Under "startup" select [x] Load INKdraw at Windows Startup
- If you also wish to start the touch screen automatically, select Startup options: [x]Touchscreen
- Click OK to accept changes