

TIPC15 Connector Wiring Diagrams

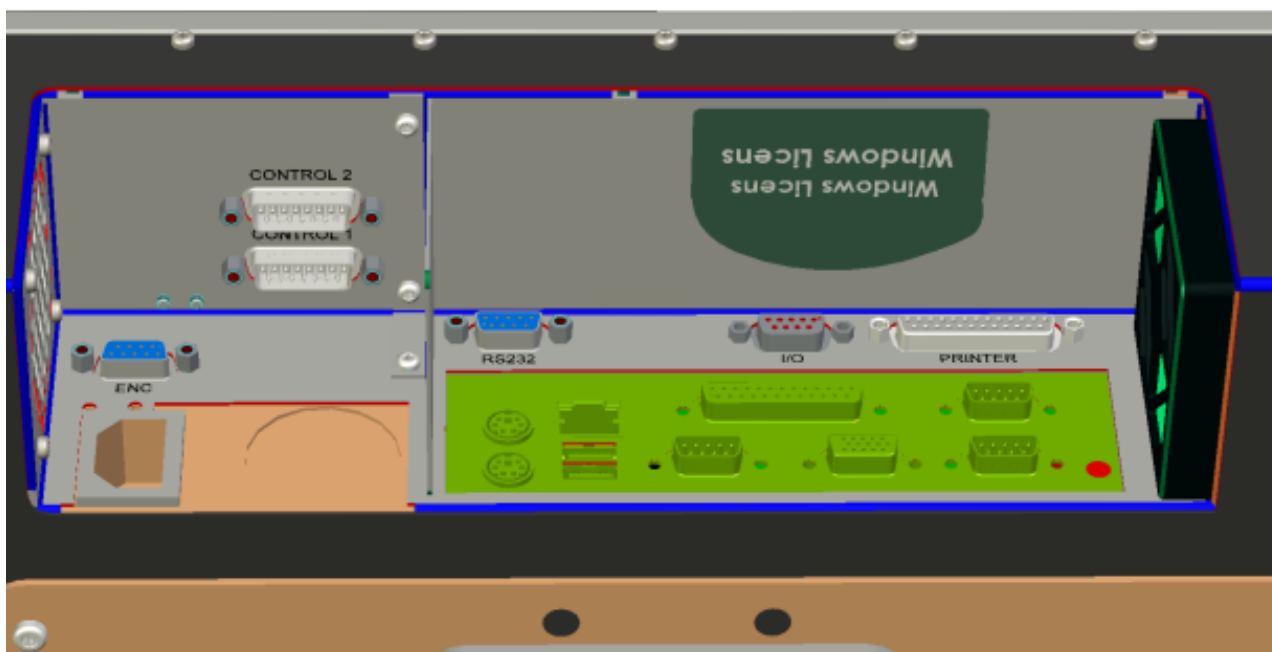
Version: 07-09-2011

This manual supports: TIPC15-HP – TIPC15-HP-P – TIPC15-XJ128 – TIPC15-XJ500

Index

TIPC15 drawing.....	1
Fuses.....	2
I/O connector	3
Encoder connector	9
Control1 connector	14
RS-232 connector.....	17
Support.....	18

TIPC15 drawing



Fuses

The controller board can supply external equipment with 5 and 12V DC from the internal PC power supply. F1 is the 12V fuse and F2 is the 5V fuse both are 1A SMD Fast acting. The value of the fuses is related to the power available from the PCB. Use only 1A if you need more power you must use an external power supply. The fuses are located inside the PC on the top of the controller board.

You can buy the fuses from HSA or locally, if you choose locally make sure you get the right fuses, warranty does not cover replacement of burned PCB's because of wrong fuses.

Part number:

HSA	Farnell	Mouser
ACEL-Fuse-1A-SMD	9922164	576-0451001.MRL

I/O connector

Main function for this connector is to provide the start signal, to begin print. In the same connector are also additional inputs as well as 2 output signals.

Output 1 = Active low - print signal / print message signal (open collector)

Output 2 = Active low - low ink warning / print signal (open collector)

Input 1 = Purge active low level trigger

Input 2 = Not used

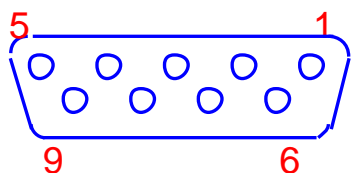
You can use either a simple mechanical switch or a photo cell for the start signal. The I/O connector can supply 5V and 12V DC for the sensor but you can use any sensor in the 3-33V range if you connect an external power source.

You can buy an I/O-ENC test box set from HSA which enables you to test:

- I/O connector - Input 1, Input 2, Output 1, Output 2, Start signal input, 5V and 12V on the I/O connector and an adjustable automatically continuous start signal is available.
- Encoder connector - Enc A & Enc B channels, Low ink, 5V and 12V and an automatically continuous encoder pulse generator is available.

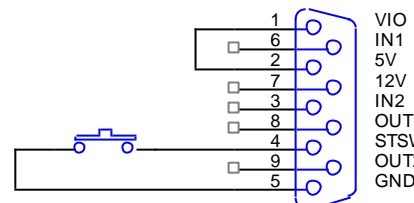
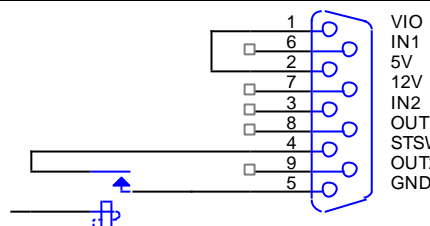
Part number:

HSA	Product category
I/O-ENC test box set	Electric spare parts

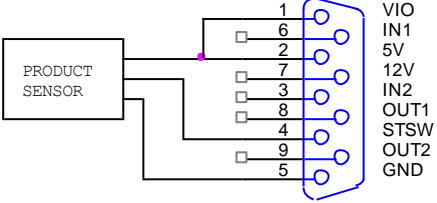
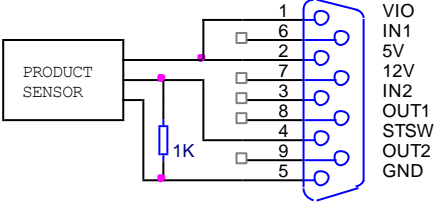


PIN	Description
1	VIO – voltage reference
2	5V
3	Input 2 – Not used
4	Start signal input
5	GND
6	Input 1 – Purge (active low)
7	12V
8	Output 1 - Active low - print/print message signal
9	Output 2 - Active low - ink low warning/print signal

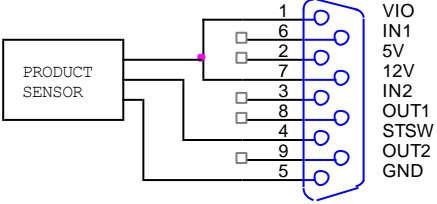
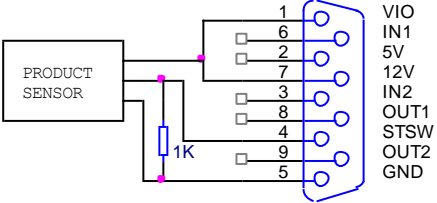
Mechanical start switch

	Pushbutton Loop pins 1-2 and connect the switch between pins 4 and 5 N/O contact setup Inkdraw to negative edge trigger N/C contact setup Inkdraw to positive edge trigger
	Relay Loop pins 1-2 and connect the switch between pins 4 and 5 N/O contact setup Inkdraw to negative edge trigger N/C contact setup Inkdraw to positive edge trigger

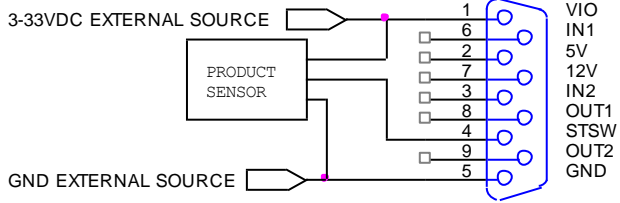
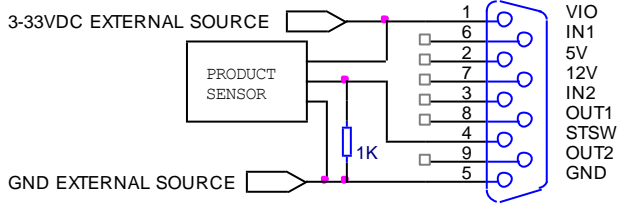
5V DC Sensor

	5 Volt NPN or PUSH/PULL sensor VCC to pins 1,2 Signal to pin 4 GND to pin 5
	5 Volt PNP sensor VCC to pins 1,2 Signal to pin 4 GND to pin 5 1 K resistor between pin 4 and 5

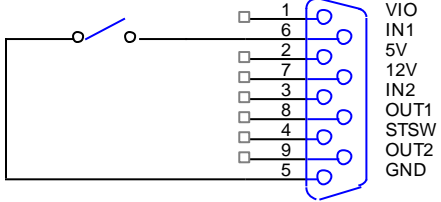
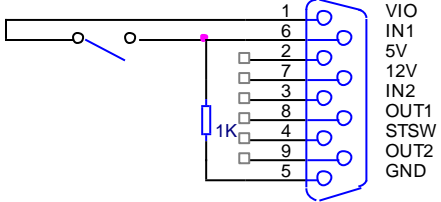
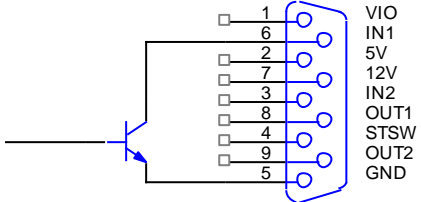
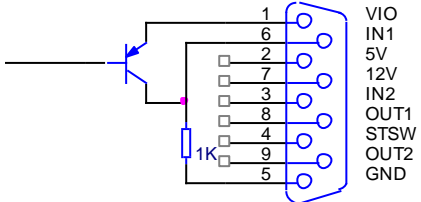
12V DC Sensor

	12 Volt NPN or PUSH/PULL sensor VCC to pins 1,7 Signal to pin 4 GND to pin 5
	12 Volt PNP sensor VCC to pins 1,7 Signal to pin 4 GND to pin 5 1 K resistor between pin 4 and 5

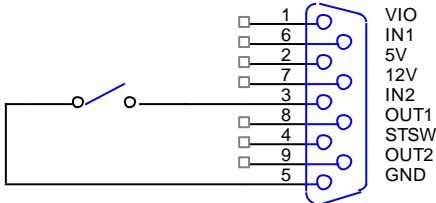
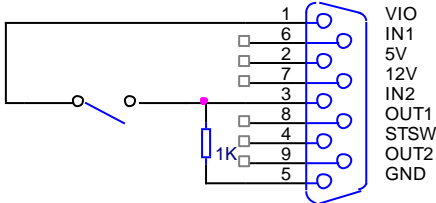
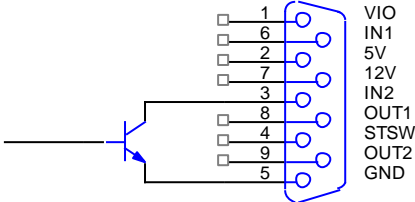
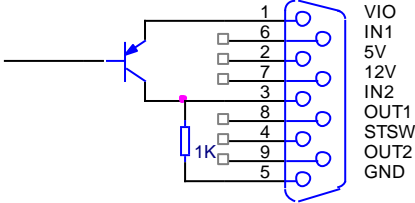
3-33V DC Sensor with external power source

	NPN or PUSH/PULL sensor VCC to pin 1 Signal to pin 4 GND to pin 5
	PNP sensor VCC to pin 1 Signal to pin 4 GND to pin 5 1 K resistor between pin 4 and 5

Input 1 – Purge active low level trigger

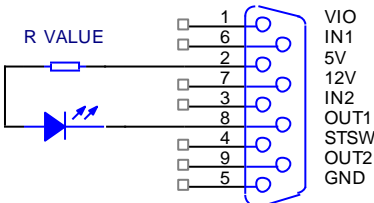
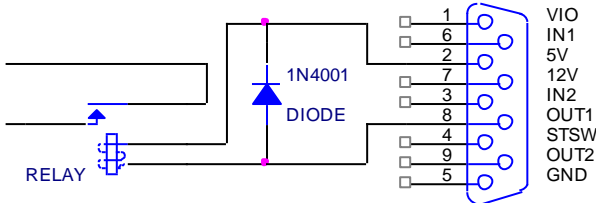
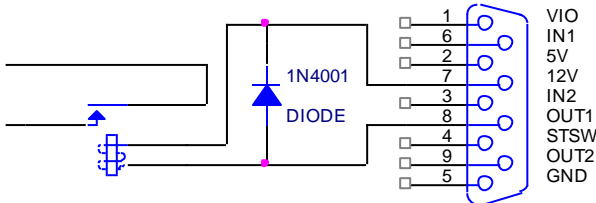
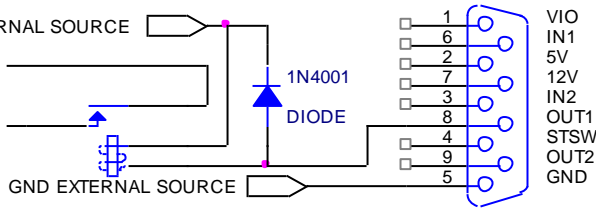
	N/O normal open mechanical switch or relay Connect the switch between pins 6 and 5
	N/C normal closed mechanical switch or relay Connect the switch between pins 1 and 6 1 K resistor between pin 6 and 5
	NPN or PUSH/PULL output trigger Signal to pin 6 GND to pin 5
	PNP output trigger VCC to pin 1 Signal to pin 6 1 K resistor between pin 6 and 5

Input 2 – Not used

	<p>N/O normal open mechanical switch or relay Connect the switch between pins 3 and 5</p>
	<p>N/C normal closed mechanical switch or relay Connect the switch between pins 1 and 3 1 K resistor between pin 3 and 5</p>
	<p>NPN or PUSH/PULL output trigger Signal to pin 3 GND to pin 5</p>
	<p>PNP output trigger VCC to pin 1 Signal to pin 3 1 K resistor between pin 3 and 5</p>

Output 1 = Active low print / print message signal (open collector)

Warning: Do not connect a relay with a higher voltage than the voltage already connected to the VIO pin1 you will damage the unit.

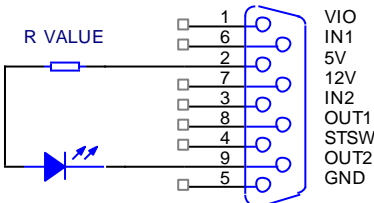
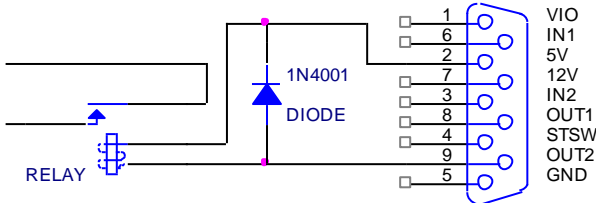
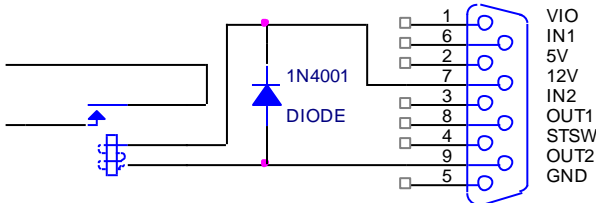
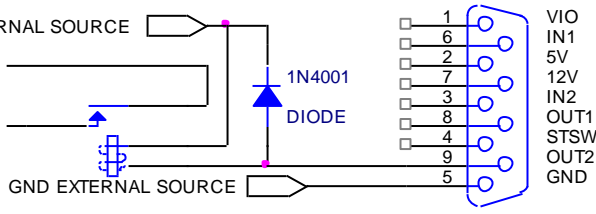
	<p>LED indicator</p> <p>Connect the components between pins 2 and 8</p> <p>The R value can be calculated using the equation below</p> $R = \frac{5 - U_d}{I_d}$ <p>Where U_d is diode voltage and I_d is diode current</p>
	<p>5V DC relay</p> <p>Connect the relay coil between pins 2 and 8</p> <p>Some relays have a built in diode, if not please also mount the protection diode on the coil connections.</p>
	<p>12V DC relay</p> <p>Connect the relay coil between pins 7 and 8</p> <p>Some relays have a built in diode, if not please also mount the protection diode on the coil connections.</p>
	<p>3-33V DC relay with external power source</p> <p>Connect the relay coil between external VCC and pin 8</p> <p>Connect external GND to pin 5</p> <p>Some relays have a built in diode, if not please also mount the protection diode on the coil connections.</p>

Warning: Do not connect a relay with a higher voltage than the voltage already connected to the VIO pin1 you will damage the unit.

The signal type can be selected in Inkdraw preferences.

Output 2 = Active low - low ink warning / print signal (open collector)

Warning: Do not connect a relay with a higher voltage than the voltage already connected to the VIO pin1 you will damage the unit.

	<p>LED indicator</p> <p>Connect the components between pins 2 and 9</p> <p>The R value can be calculated using the equation below</p> $R = \frac{5 - U_d}{I_d}$ <p>Where U_d is diode voltage and I_d is diode current</p>
	<p>5V DC relay</p> <p>Connect the relay coil between pins 2 and 9</p> <p>Some relays have a built in diode, if not please also mount the protection diode on the coil connections.</p>
	<p>12V DC relay</p> <p>Connect the relay coil between pins 7 and 9</p> <p>Some relays have a built in diode, if not please also mount the protection diode on the coil connections.</p>
	<p>3-33V DC relay with external power source</p> <p>Connect the relay coil between external VCC and pin 9</p> <p>Connect external GND to pin 5</p> <p>Some relays have a built in diode, if not please also mount the protection diode on the coil connections.</p>

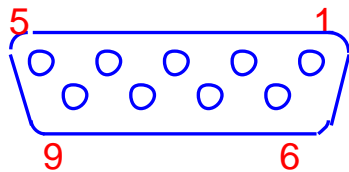
Warning: Do not connect a relay with a higher voltage than the voltage already connected to the VIO pin1 you will damage the unit.

The signal type can be selected in Inkdraw preferences.

Encoder connector

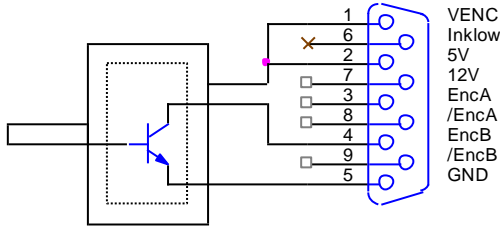
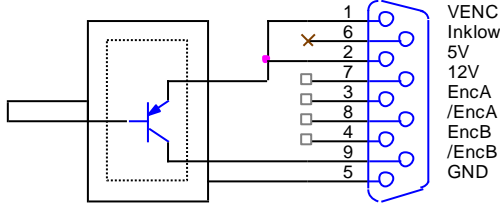
This connector is where the signals for the encoder are coming in. In the same connector is also an additional output signal for low ink level warning on Xaar versions.

The encoder connector can supply 5V and 12V DC for the encoder but you can use any encoder in the 3-33V range if you connect an external power source.

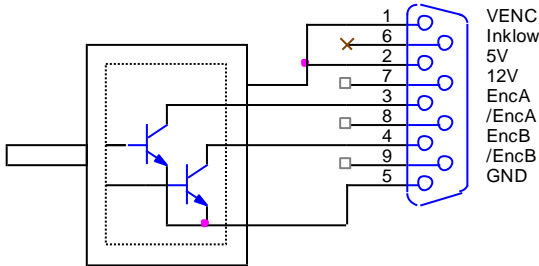
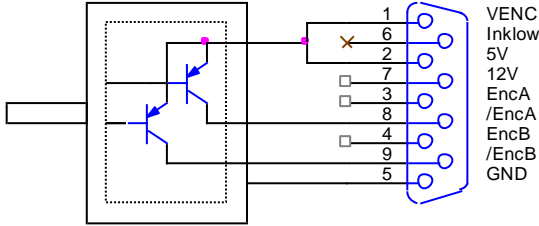


PIN	Description
1	VENC – voltage reference
2	5V
3	Encoder A
4	Encoder B
5	GND
6	Inklow - output
7	12V
8	/Encoder A (inverted)
9	/Encoder B (inverted)

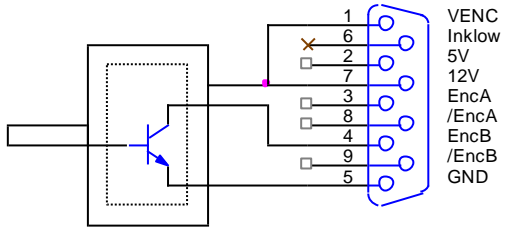
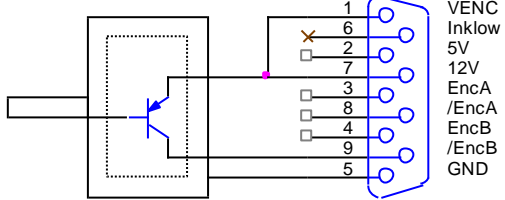
5V DC Encoder single channel

	5V DC NPN or PUSH/PULL VCC to pins 1, 2 Signal to pin 4 GND to pin 5
	5V DC PNP VCC to pins 1, 2 Signal to pin 9 GND to pin 5

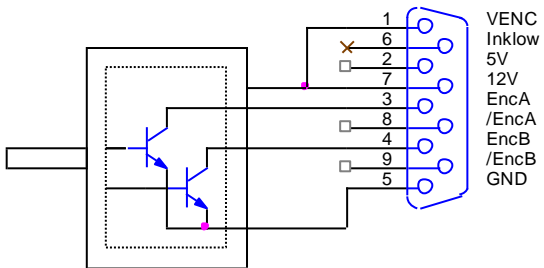
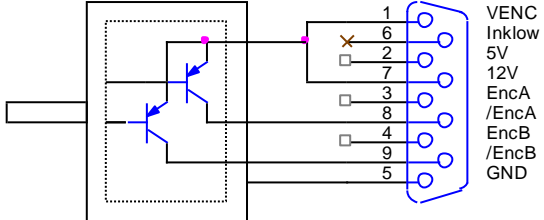
5V DC Encoder dual channel

	5V DC NPN or PUSH/PULL VCC to pins 1, 2 Signals to pins 3, 4 GND to pin 5
	5V DC PNP VCC to pins 1, 2 Signals to pins 8, 9 GND to pin 5

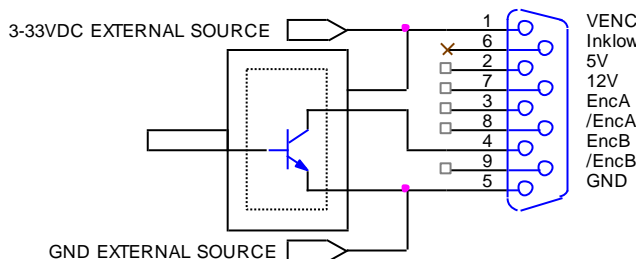
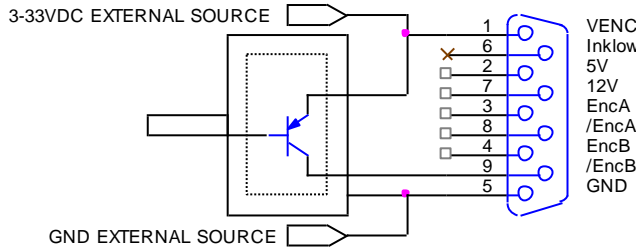
12V DC Encoder single channel

	12V DC NPN or PUSH/PULL VCC to pins 1, 7 Signal to pin 4 GND to pin 5
	12V DC PNP VCC to pins 1, 7 Signal to pin 9 GND to pin 5

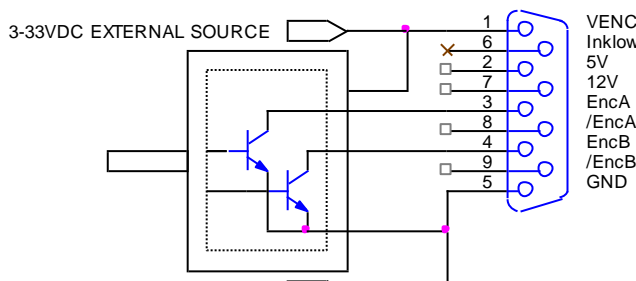
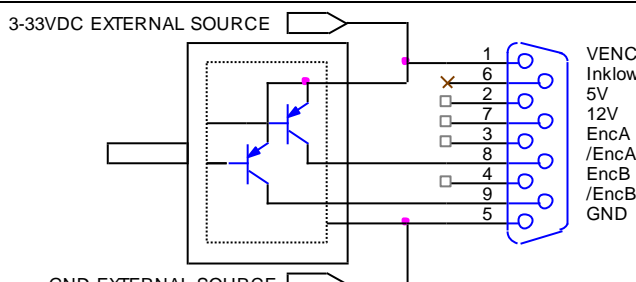
12V DC Encoder dual channel

	12V DC NPN or PUSH/PULL VCC to pins 1, 7 Signals to pins 3, 4 GND to pin 5
	12V DC PNP VCC to pins 1, 7 Signals to pins 8, 9 GND to pin 5

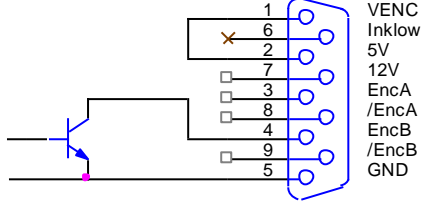
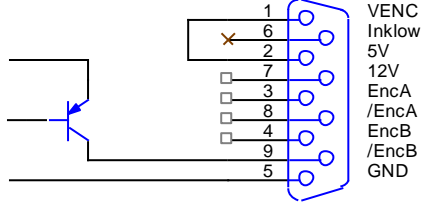
3-33V DC Encoder with external power source single channel

	3-33V DC NPN or PUSH/PULL with external power source VCC to pin 1 Signal to pin 4 GND to pin 5
	3-33V DC PNP with external power source VCC to pin 1 Signal to pin 9 GND to pin 5

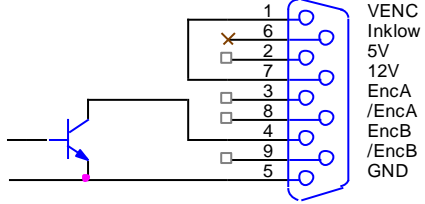
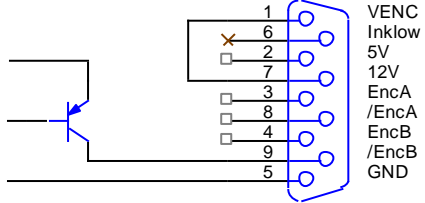
3-33V DC Encoder with external power source dual channel

	3-33V DC NPN or PUSH/PULL with external power source VCC to pin 1 Signal to pin 3, 4 GND to pin 5
	3-33V DC PNP with external power source VCC to pin 1 Signal to pin 8, 9 GND to pin 5

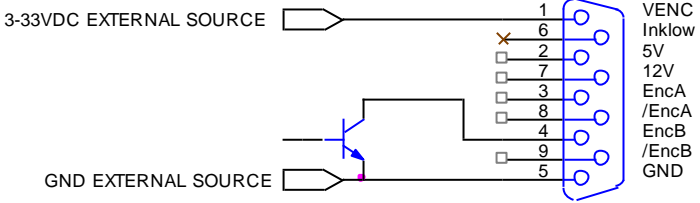
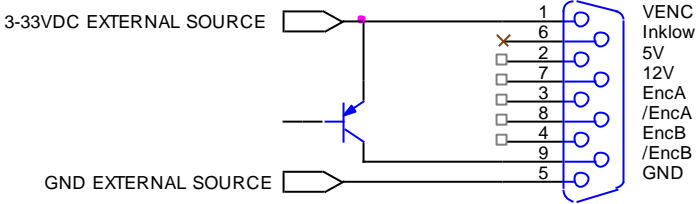
5V DC simulated encoder with external power source

	5V DC NPN or PUSH/PULL with external power source Loop pins 1-2 Signal to pin 4 GND to pin 5
	5V DC PNP with external power source Loop pins 1-2 Signal to pin 9 GND to pin 5

12V DC simulated encoder with external power source

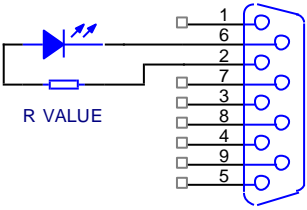
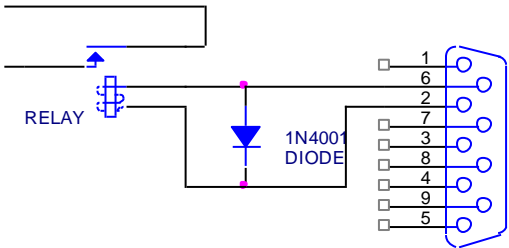
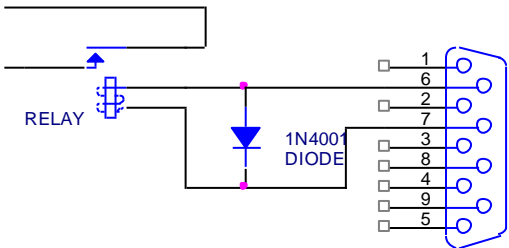
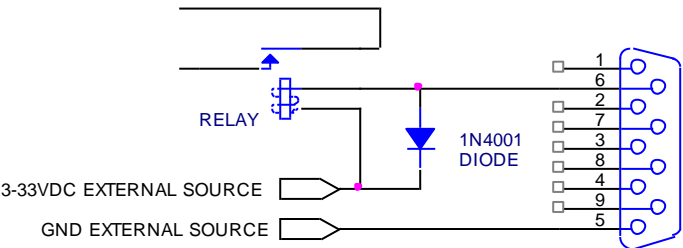
	12V DC NPN or PUSH/PULL with external power source Loop pins 1-7 Signal to pin 4 GND to pin 5
	12V DC PNP with external power source Loop pins 1-7 Signal to pin 9 GND to pin 5

3-33V DC simulated encoder with external power source

	3-33V DC NPN or PUSH/PULL with external power source VCC to pin 1 Signal to pin 4 GND to pin 5
	3-33V DC PNP with external power source VCC to pin 1 Signal to pin 9 GND to pin 5

Low ink level output active low (open collector) XJ128 and XJ500 versions only.

Warning: Do not connect a relay with a higher voltage than the voltage already connected to the VENC pin1 you will damage the unit.

	<p>LED indicator</p> <p>Connect the components between pins 2 and 6</p> <p>The R value can be calculated using the equation below</p> $R = \frac{5 - U_d}{I_d}$ <p>Where U_d is diode voltage and I_d is diode current</p>
	<p>5V DC relay</p> <p>Connect the relay coil between pins 2 and 6</p> <p>Some relays have a built in diode, if not please also mount the protection diode on the coil connections.</p>
	<p>12V DC relay</p> <p>Connect the relay coil between pins 6 and 7</p> <p>Some relays have a built in diode, if not please also mount the protection diode on the coil connections.</p>
	<p>3-33V DC relay with external power source</p> <p>Connect the relay coil between external VCC and pin 6</p> <p>Connect external GND to pin 5</p> <p>Some relays have a built in diode, if not please also mount the protection diode on the coil connections.</p>


Warning: Do not connect a relay with a higher voltage than the voltage already connected to the VENC pin1 you will damage the unit.

Control1 connector

I/O extension for mailing - The CB2/CBF must be mail coded in order to use these functions.

This connector is an I/O extension for mailing systems and special projects. The controller board can support up to 8 outputs and 4 inputs on this connector but only with project specific or mailing FPGA's.

The stacker connector can supply 5V DC for the external devices but you can use any device in the 3-33V range if you connect an external power source. Please note that this connector share power supply and fuses with the I/O and encoder connector



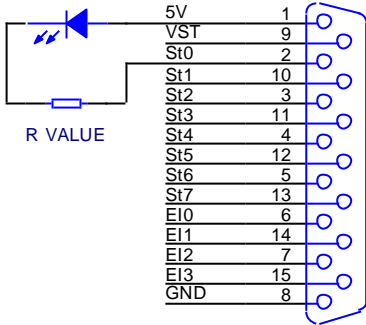
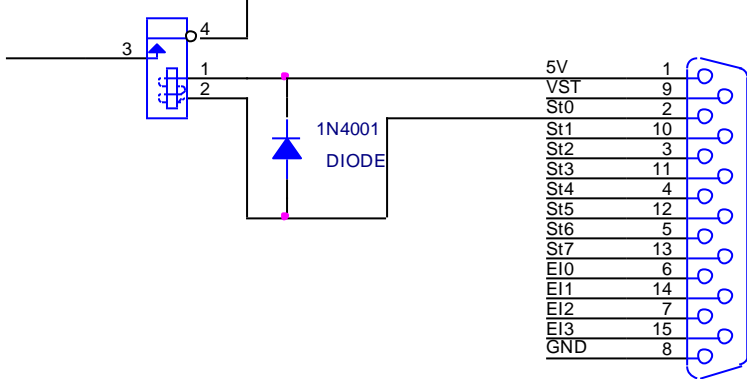
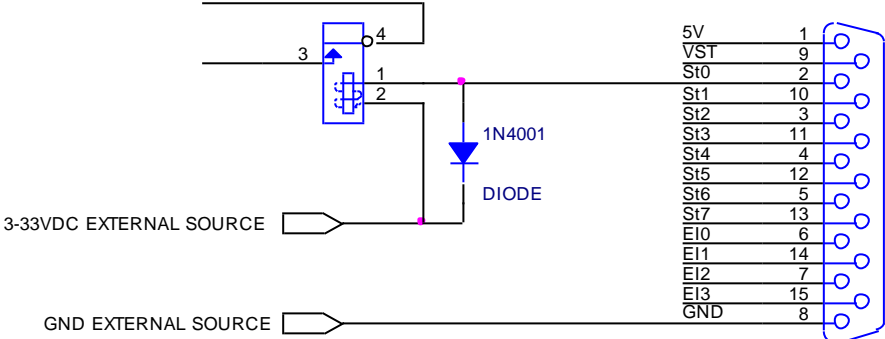
PIN	Description
1	5V
2	St0 output
3	St2 output
4	St4 output
5	St6 output
6	EI0 Input
7	EI2 Input
8	GND
9	VST – voltage reference
10	St1 output
11	St3 output
12	St5 output
13	St7 output
14	EI1 Input
15	EI3 Input

The schematics in this manual show how to connect the output called St0. The other outputs on the connector can be connected using St0 as a model, move the wire from St0 to St1-7 the other wires are the same for all outputs.

Control1 outputs

The schematics in this manual show how to connect the output called St0. The other outputs on the connector can be connected using St0 as a model, move the wire from St0 to St1-7 the other wires are the same for all outputs.

Warning: Do not connect a relay with a higher voltage than the voltage already connected to the VST pin 9 you will damage the unit. If you do not use the inputs on this connector you must connect VST to the highest voltage supply that you use on this connector.

	<p>LED indicator</p> <p>Connect the components between pins 1 and 2</p> <p>The R value can be calculated using the equation below</p> $R = \frac{5 - U_d}{I_d}$ <p>Where U_d is diode voltage and I_d is diode current</p>
	<p>5V DC relay</p> <p>Connect the relay coil between pins 1 and 2</p> <p>Some relays have a built in diode, if not please also mount the protection diode on the coil connections.</p>
<p></p>	<p>12V DC relay</p> <p>12V is not available on this connector</p>
	<p>3-33V DC relay with external power source</p> <p>Connect the relay coil between external VCC and pin 2</p> <p>Connect external GND to pin 8</p> <p>Some relays have a built in diode, if not please also mount the protection diode on the coil connections.</p>

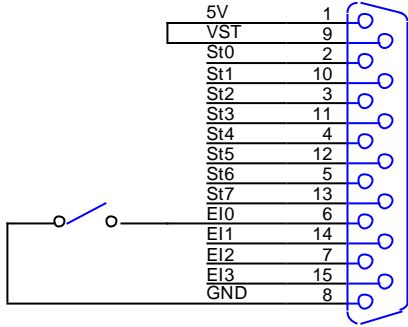
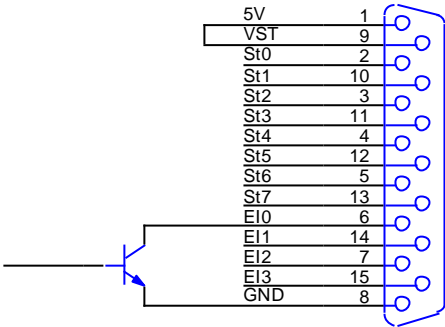
Warning: Do not connect a relay with a higher voltage than the voltage already connected to the VST pin 2 you will damage the unit. If you do not use the inputs on this connector you must connect VST to the highest voltage supply that you use on this connector.

The signal type can be selected in Inkdraw preferences.

Control1 inputs

The CB2/CBF must be mail coded in order to use these functions.

The schematics below show how to connect the input called Ei0 if you need other inputs on the connector you can just move the wire on Ei0 to Ei1-3 the other wires are the same for all inputs.

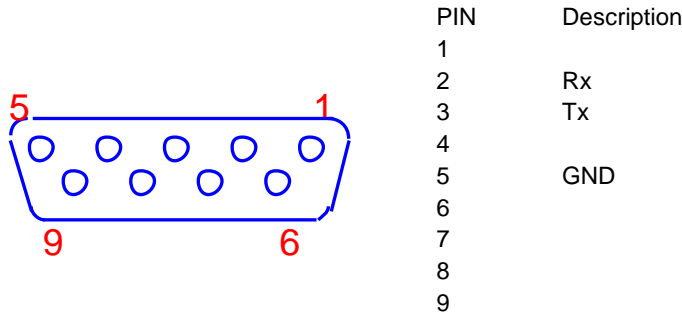
	<p>N/O normal open mechanical switch or relay</p> <p>Connect the switch between pins 6 and 8</p> <p>Connect a reference voltage to VST in this example 5V is chosen.</p> <p>(if you need to use the outputs with a higher voltage than 5 volts you must connect VST to the highest voltage that you use)</p>
	<p>N/C normal closed mechanical switch or relay</p> <p>You cannot use a relay of this type on this input</p>
	<p>NPN output trigger</p> <p>Connect a reference voltage to VST in this example 5V is chosen.</p> <p>Signal to pin 6</p> <p>GND to pin 8</p>
	<p>PNP output trigger</p> <p>There is no standard option for PNP on this input. If you cannot use one of the options above you can contact support for more information.</p>

Warning: If you need to use the outputs with a higher voltage than 5 volts you must connect VST to the highest voltage that you use.

RS-232 connector

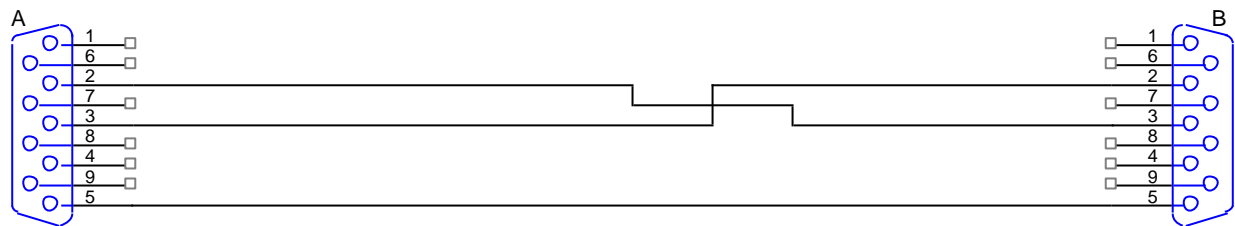
This connector is used for remote communication with the TIPC15, this section will tell you how to connect the wires, please see the remote communication manual for port setup and commands.

The connector is 9 pin Male, and the pins are configured as master. If you wish to connect from a standard PC com port you must use a crossed cable.



Crossed cable

Connector A pin 5 is connected to connector B pin 5
Connector A pin 2 is connected to connector B pin 3
Connector A pin 3 is connected to connector B pin 2



Support

For support please contact your local distributor or HSA Systems customer service

E-mail: techsupport@hsasystems.com

Phone: +45 66 10 34 01

